

Measuring Guide for Betta 2000 Auto Lock Arm Awning

Please Note: These instructions should be read thoroughly before installing.

This is a guide to assist in the measuring of external awnings. Betta Blinds and Awnings do not guarantee the accuracy of the information contained in this guide. We recommend an experienced expert measurer/installer to rely upon their own skills. This is based on general knowledge concerning which is known to us at the time of printing this guide, consequently, is subject to change and Betta Blinds and Awnings specifically reserves the right to change this guide without notification.

When measuring a brick wall NEVER put the screw into a mortar line. If the position you need to measure is over a mortar line measure to the next brick up or across

- Use a good quality tape measure (metal ones are best) and measure down to the nearest mm.
- It is essential the measurements provided are accurate for the blinds to fit correctly (do not be surprised if your windows / posts are not perfectly square)
- Measure all windows / posts, even if they appear to be the same size.
- Betta 2000's Auto Lock Arms can be fitted in various positions and or surfaces.
- Face Fit (Outside Fit) The most common fit for a Betta 2000 Auto Lock Awning and recommended
- Reveal Fit (Inside Fit) Betta Blinds & Awnings does not recommend installing Betta 2000 Auto Lock Arms into a Reveal Fit – If reveal fit is necessary extra brackets will be needed. Make sure the reveal is deep enough to fit the awning.
- **Always take note of any obstructions to the awning's operation, such as down pipes, air conditioners, windows that open outwards, door handles, timber beams. If obstacles are the way you may need to measure and fit the awning differently.**
- Always indicate the WIDTH measurement first, then the DROP last. (e.g., 2150mm x 1530mm)
- Please take extra time to measure all the windows/posts accurately, a helpful rule is "measure once, measure twice and measure again to be sure!"
- Take all your measurements in millimetres (mm).
- If in a coastal area Betta Blinds recommends upgrading to Stainless Guide Bars & Arms
- For larger blinds refer to the Betta Blinds pricing guide sizes to ensure the blind can be manufactured successfully and are covered by any appropriate warranties.
- Awnings made outside of Betta Blinds recommendations are not covered under warranty.

Measuring for a wall/window - Face Fit

1. Measure the width at the top of your widow/opening and where you will be fitting the awning. It is recommended that the awning is measured/installed 100mm (minimum) either side of the window frame (this helps to provide fabric coverage) A rule of thumb is to measure from half a brick to half a brick.


NOTE: This is just a guide only, you can measure wider if required, if possible

2. It is recommended that the awning be measured/installed 200mm (minimum) above the window opening if the height is available. If the position is towards the edge of brick/block or on a mortar line, go up the centre of the next brick/block. This extra height will prevent visibility of a retracted awning when inside the house. A rule of thumb is to measure from 200mm or two courses of bricks above the window down to the brick sill.

NOTE: This is just a guide only, you can measure higher up of lower if required. Please see photo below.

3. Betta Blinds has two pull down stick sizes: 900mm & 2000mm. While onsite please check which pull down stick will be required.

- **Example Below:** Window Width is 2650mm + 100mm (half a brick) + 100mm (half a brick) = 2850mm
Window Drop is 2000mm + 200mm (2 brick courses) = 2200mm
- Order Awning @ 2850mm x 2200mm

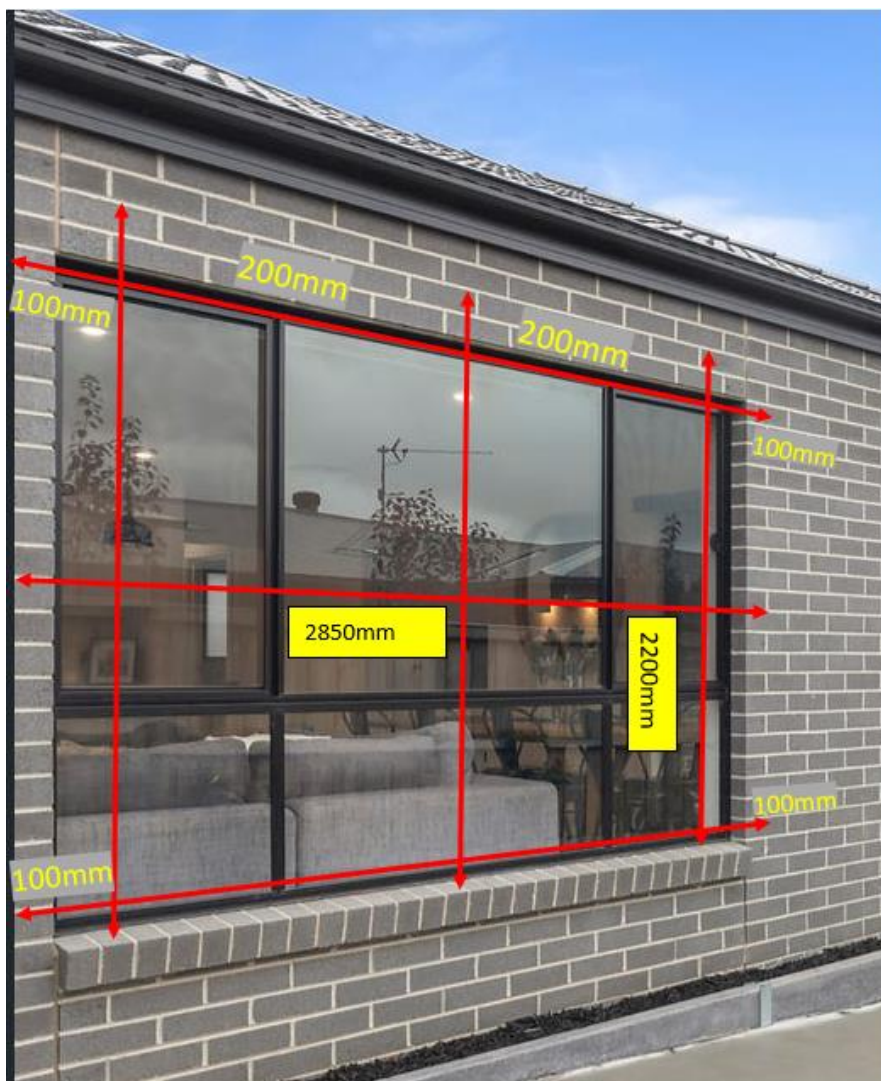

Remember we require a width from outside to outside of brackets / weather box. Please provide measurements to nearest millimetre to ensure a perfect fit.